



QUICK GUIDE: ACTIVATING THE BLE MODULE



TECHNOTON
ТЕЛЕМАТИКА СЛОЖНЫХ МАШИН

1. Install the Axle Load Monitor app


Installation and usage instructions can be found in the document «GNOM S7 Axle Load Sensors. User Manual»

2. Launch the app

Once you grant all requested permissions, the app will be ready for use and will automatically begin searching for available sensors.

3. Switch the sensor to “Service” mode

You’ll know the sensor has entered Service mode when the **Wrench** icon appears next to the sensor’s name:

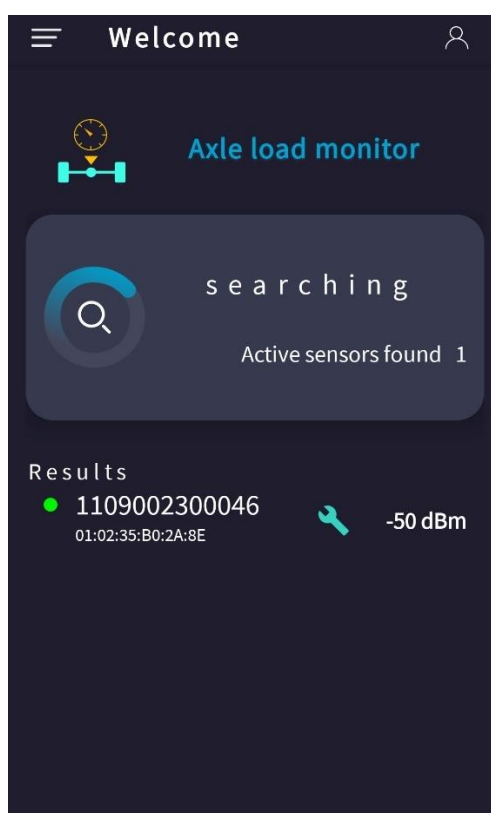

For detailed information about sensor operating modes based on the BLE module status and instructions on how to activate them, refer to the «GNOM S7 Axle Load Sensors. User Manual».


Note: If the sensor is not connected to a mobile device within **20 seconds** of entering Service mode, it will automatically revert to its previous mode.

4. Connect to the sensor


Tap on the desired sensor in the list, then enter the login (top field) and password (bottom field) in the **Authorization** window.

Default login: **0**

Default password: **1111**

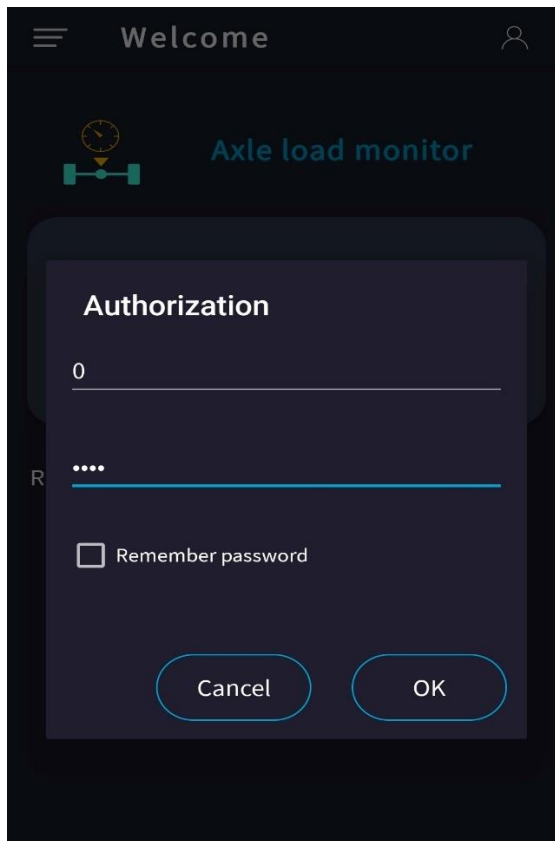

After successful authorization, the Service Mode window will open, showing the sensor's identification details. Tap the **Operating Mode** button to activate it:

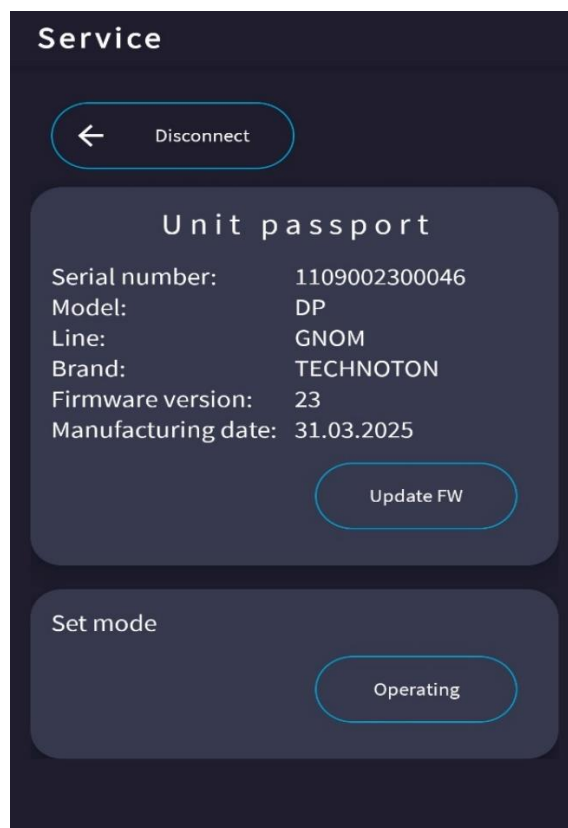

5. Disconnect from the sensor

Tap the **Disconnect** button. After 30 seconds, go to the **Search** menu in the app and start scanning for available sensors.

Confirm that the sensor has switched to Operating Mode:

